WHY IS MAINTENANCE OF INFLATABLE LIFEJACKETS IMPORTANT?

Inflatable lifejackets require technical inspection and annual maintenance to ensure that the lifejackets work as required when you need them. You can carry out pre-use inspections yourself. Read the user manual carefully! Check that the vest is intact before use. Open the cover and check the lung itself. Make sure that the CO2-cylinder is fully screwed into place and is not damaged. Check that the end cap is screwed fully into place and that the indicator clip is correctly in position. Ensure that the pull cord is placed outside the outer cover. See instructions in the product's packaging or go to www.regatta.no for more information.

Bobbin HR

Bobbin UM

Crotch strap

Re-arming kit HR 33 gr. complete

Re-arming kit HR 24 gr. complete

Re-arming kit UM 33 gr. complete

Operating head UM

Previous version of Operating head HR

APPROVED ACCORDING TO THE NEW INTERNATIONAL STANDARD FOR INFLATABLE LIFEJACKETS

ISO 12402

REPLACEMENT OF BOBBIN TYPE HR

• Date stamped bobbin (production date)
• Bobbin shape ensures correct fitting

• Ensure that the end cap is screwed fully into place

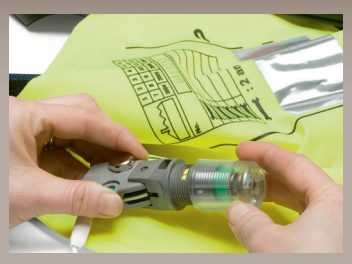
• End cap displays a green indicator when correctly fitted

CHANGE/INSPECTION OF CO2-CYLINDER

• Replacement after cylinder has been discharged
• Replacement of gasket
• Visual control

• Ensure that the cylinder is fully screwed into place

CORRECT PACKING OF INFLATABLE LUNG WITH SEPARATE OUTER COVER

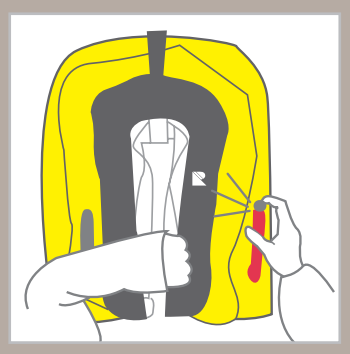
Remove all the air by pressing the valve cap on the nozzle and apply pressure to the lung.

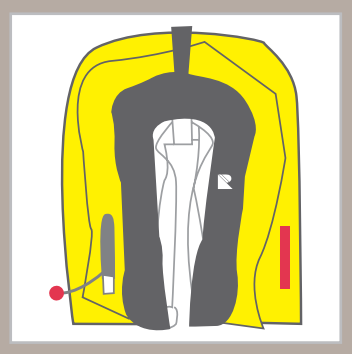
The lifejacket is flattened and is prepared for packing.

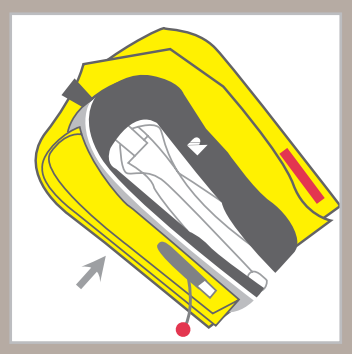
Fold the lung up. First fold the side where the re-arming mechanism is found. Remember to close the Velcro opening. Fold in layers as shown*. The pull card is to be fed out through the Velcro.

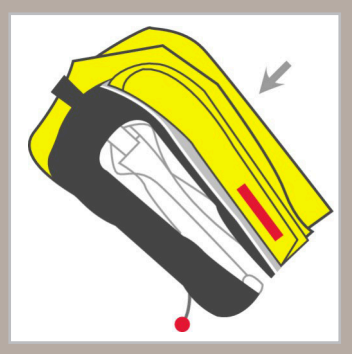
Then fold the opposite side. Remember to close the Velcro opening. Ensure that the nozzle is easily accessible. Attach the grab loop over the nozzle.

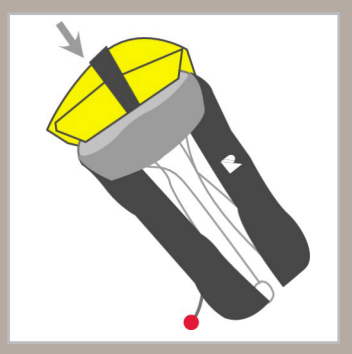
Finally, fold the vest collar section. Ensure that the belt strap is centred.

The inflatable lung must not be rolled.

* Inflatable lung must be folded.